

Elan Automation and Intercom System



Please download the Elan 8 app to your device.

You can download the 'Elan 8' App from the App Store on Apple or Android.


To connect your system with the Elan 8 App:

1. Connect your device to your home Wi-Fi.
2. Open Elan 8 App.
3. Press 'Connect to an Existing system'.
4. You will see the name of your system is already in the System Name section.
5. Tick the 'Save Password' and 'Connect Automatically' boxes.
6. Type in the password you created with your installer.
7. Press save in the top right corner.
8. Your system is now configured.
9. You will need to do this on EACH device you want to have control on.

Click [HERE](#) to access a series of Elan Videos. The password is 'AVi2020'.

Home Menu

Select from the menu on
the left

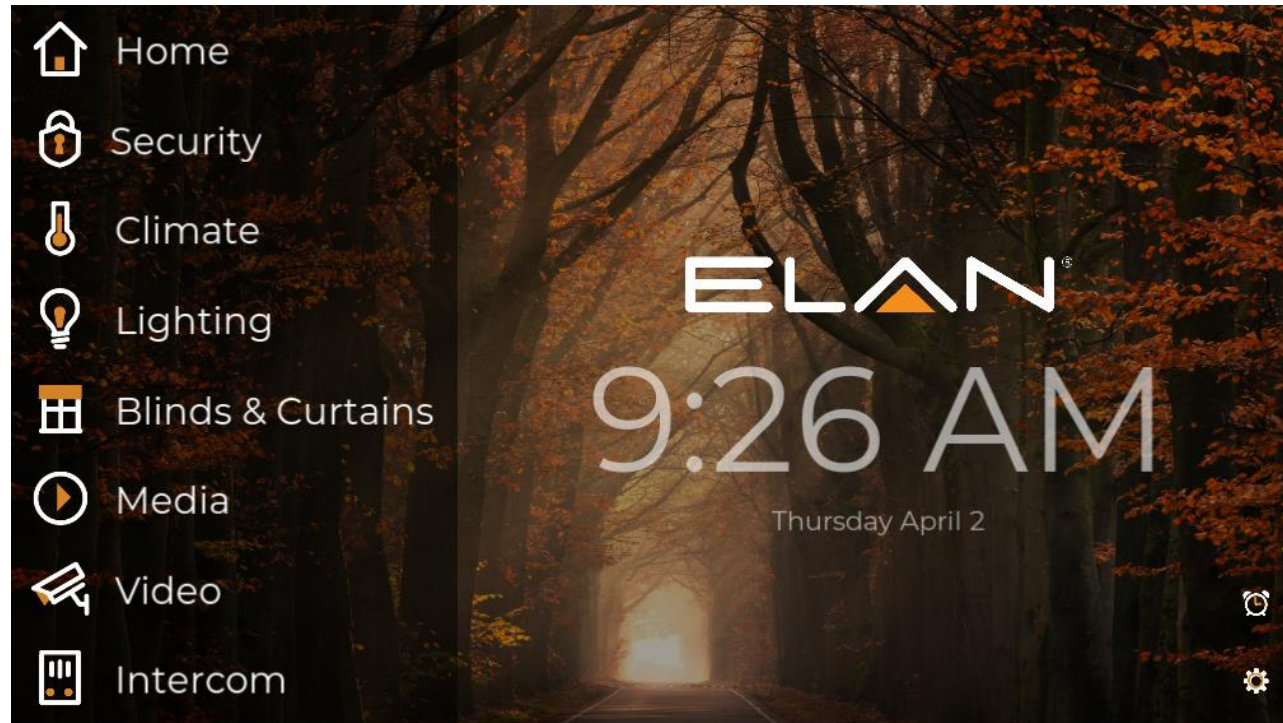


Setup alarms

Settings

Lighting Control

Choose a room where you want to control the lights

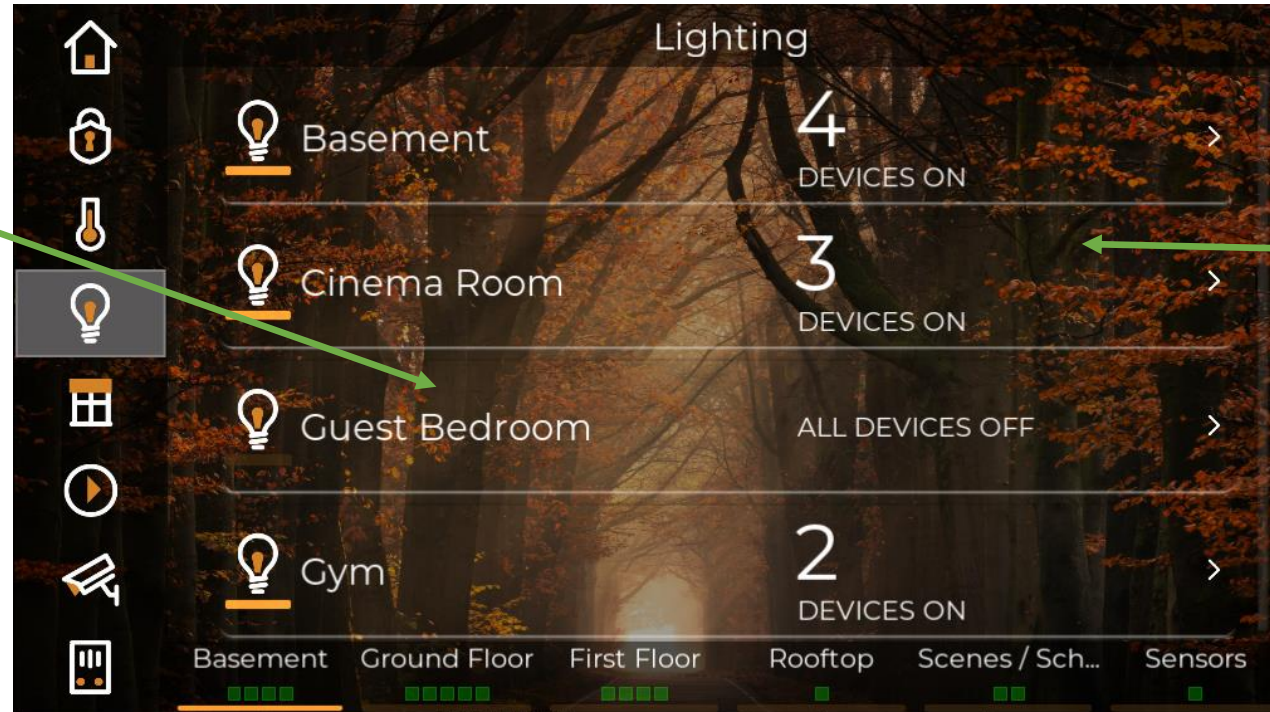

Will display a number that represents how many lights are 'ON'

Firstly, select an AREA from the bottom of the screen. If using your phone simply press the arrows on the right of the lighting heading to scroll between areas.


Next, select which room you want to control.

Then control the light. Dimmable lights have a slider and non-dimmable are just a button. You can also quickly control a dimmable light by pressing the button with the name.





Lighting Scenes & Schedules


To operate and Edit the lighting Scenes and Schedules. Press the 'Scenes/Schedules' tab at the bottom of the lighting page.

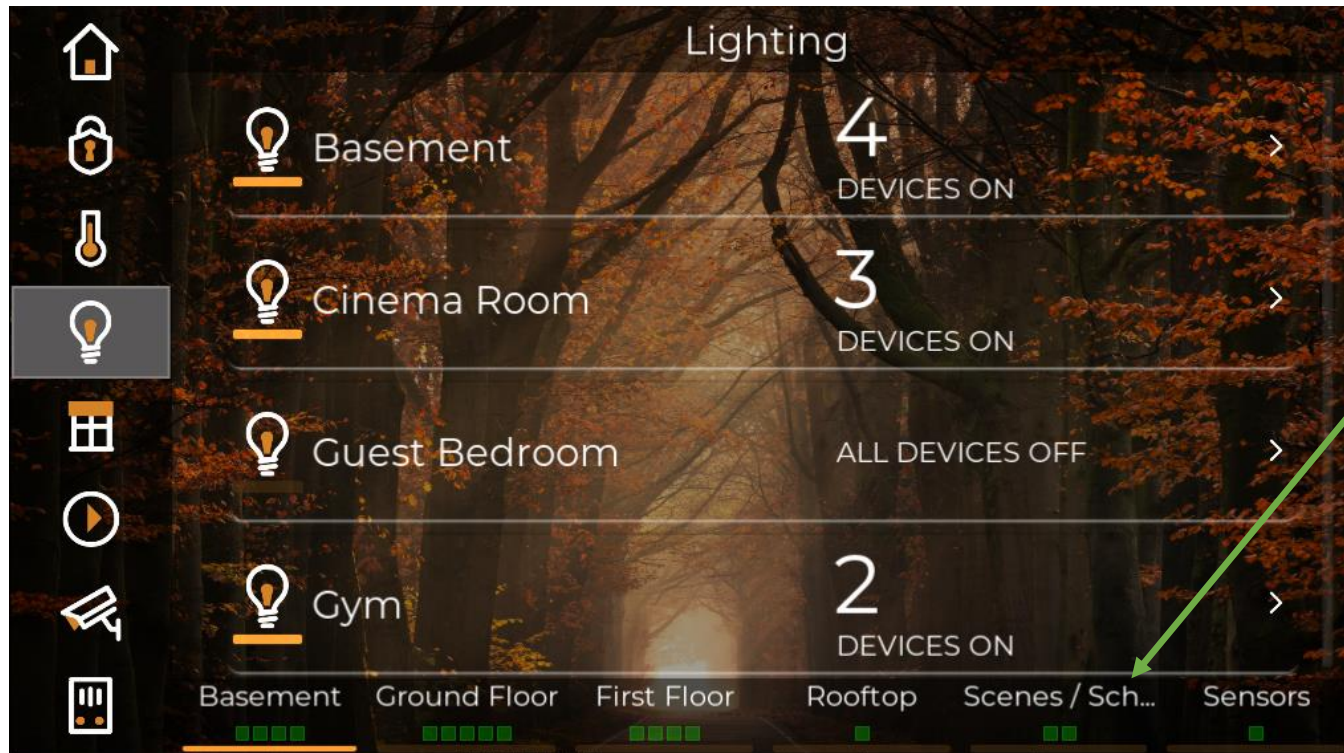

Then tap on the 'Scenes' button to be taken to a list of available lighting scenes.

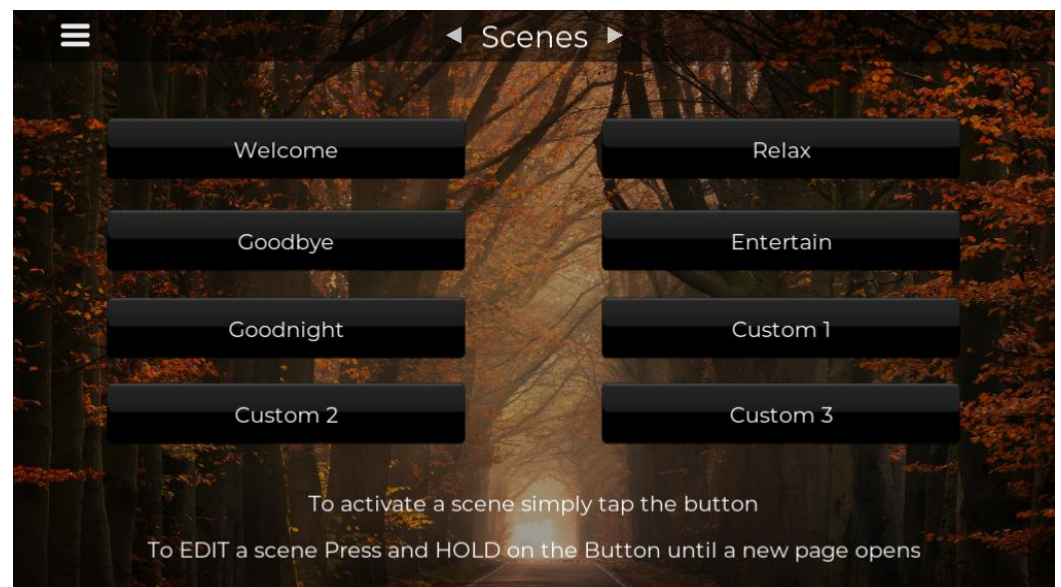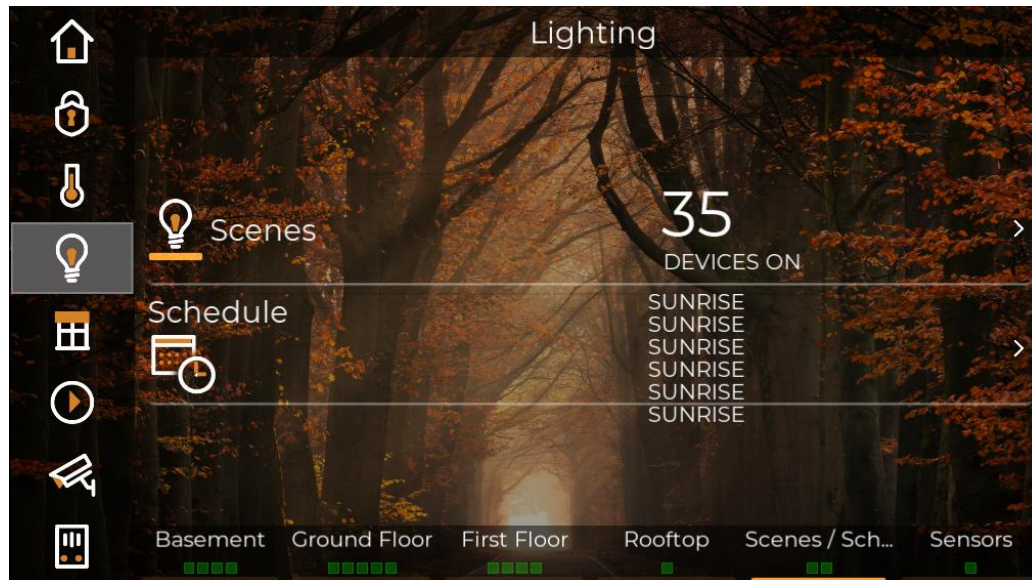

To activate a scene, simply tap the scene button. To Edit the scene, press and **HOLD** on the button until a new page opens.

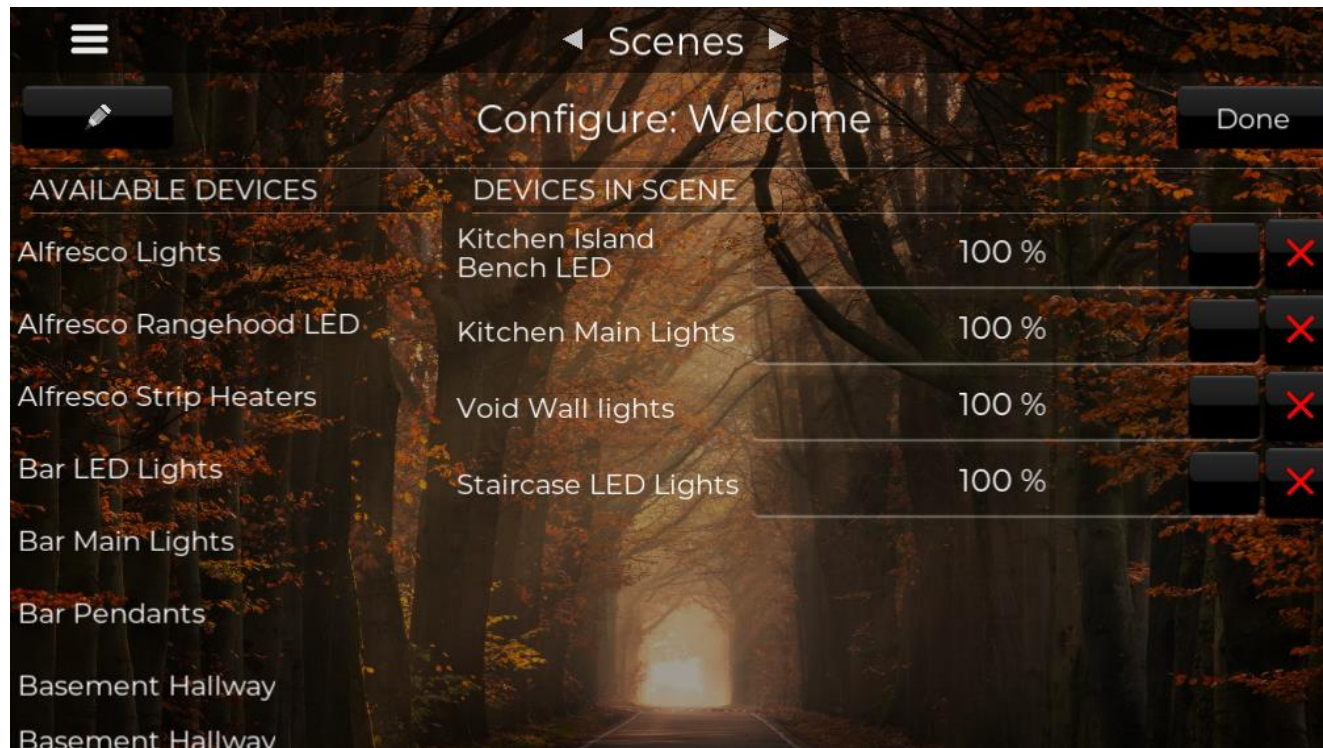


Here you will see a list of every CBUS light which is available in the house on the left. And to the right are the lights which are currently in the scene. Simply scroll through the list to the left and select which lights you want in the scene. Then select if the light is on or off or how dim. Then press 'Done' to save it. For the scenes listed as 'Custom 1, 2 & 3'. You can also edit the name of the scene by pressing on the pencil icon in the top left.

Now whenever you press on the scene button, whatever you configured will now happen.

The Elan system can also run lighting schedules for you if you desire. To set up these schedules simply navigate to the 'Schedules' area and select a schedule from the left. By default, all schedules all start at Sunset, but this can be changed once from the drop down box.


To add a light to the schedule, tap on '+ Switches', then a list of available items will pop up.

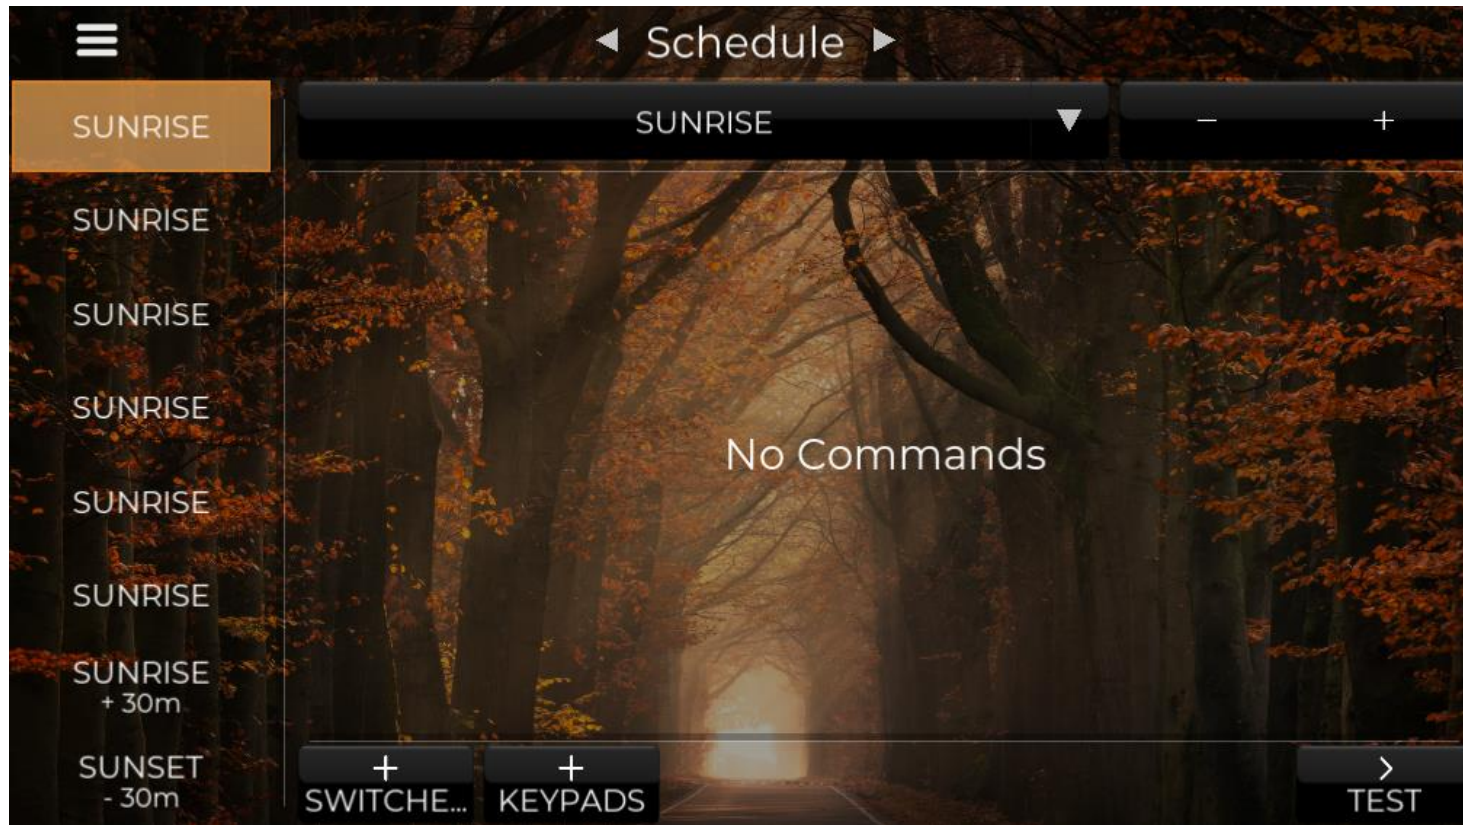


Lighting Sensors Enable & Disable

Each of the lighting sensors thought and around the house have the ability to be Enabled or Disabled via Elan.

You can manually control whether a sensor is enabled by turning it on and off from the 'Sensors' tab in the 'Lighting' section.

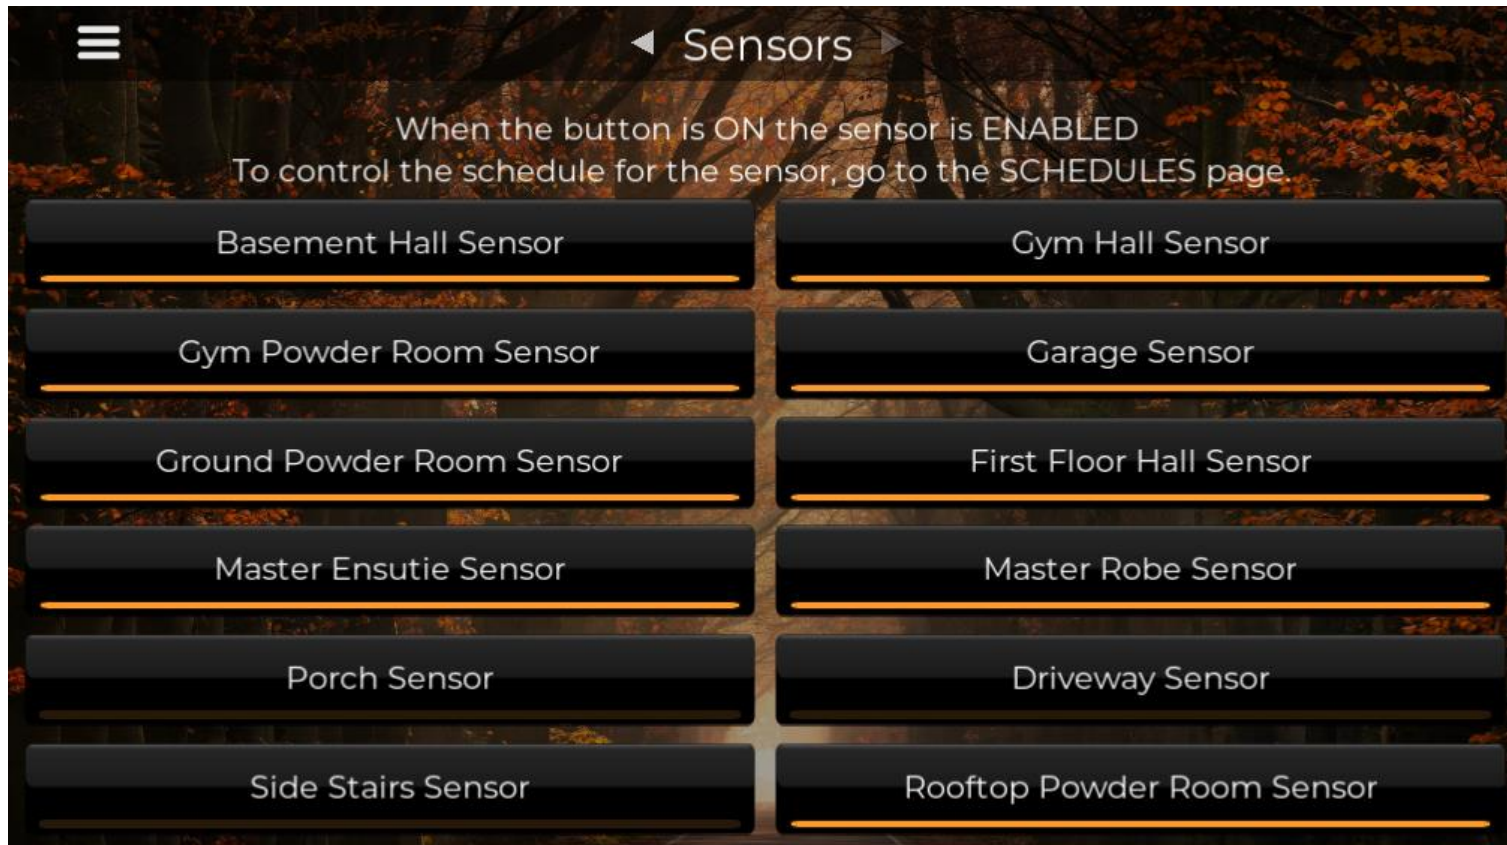


To allow the sensors to work effectively, we recommend creating 2 schedules to turn the sensors on and off at appropriate times. To edit these times, or which sensors are disabled during the day, simply go to the 'Schedules' page.

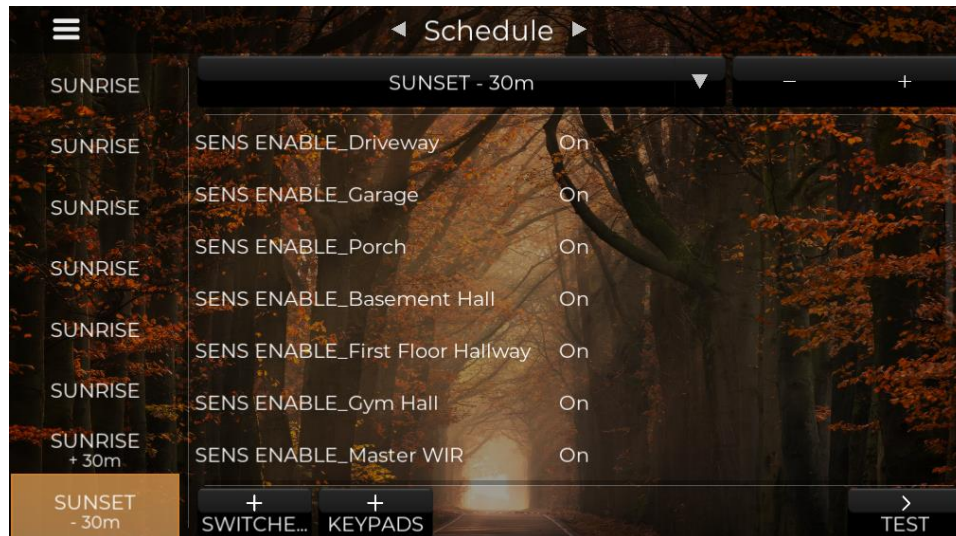

In this example, ALL sensors are ENABLED at 30 Minutes before Sunset.


Then the Driveway, Porch and Side Path are DISABLED at 30 minutes after Sunrise. Which means these sensors are not working during the day. To add sensors to be disabled, simply tap on the '+ Switches' button and scroll to the 'SENS ENABLE...' section and add whichever sensor you want to disable.

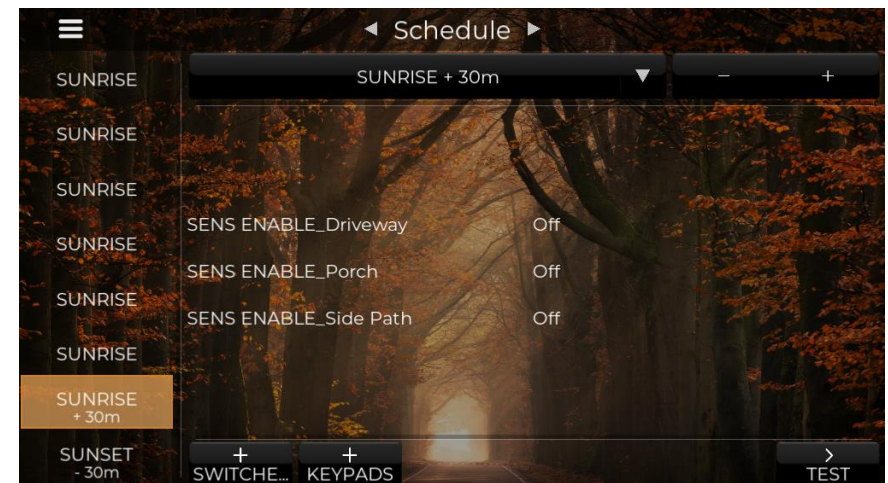

Security System & Access Control

The Elan system also has your alarm system and access control.


To control alarm system, or check on its status, tap the 'Home' icon at the top.

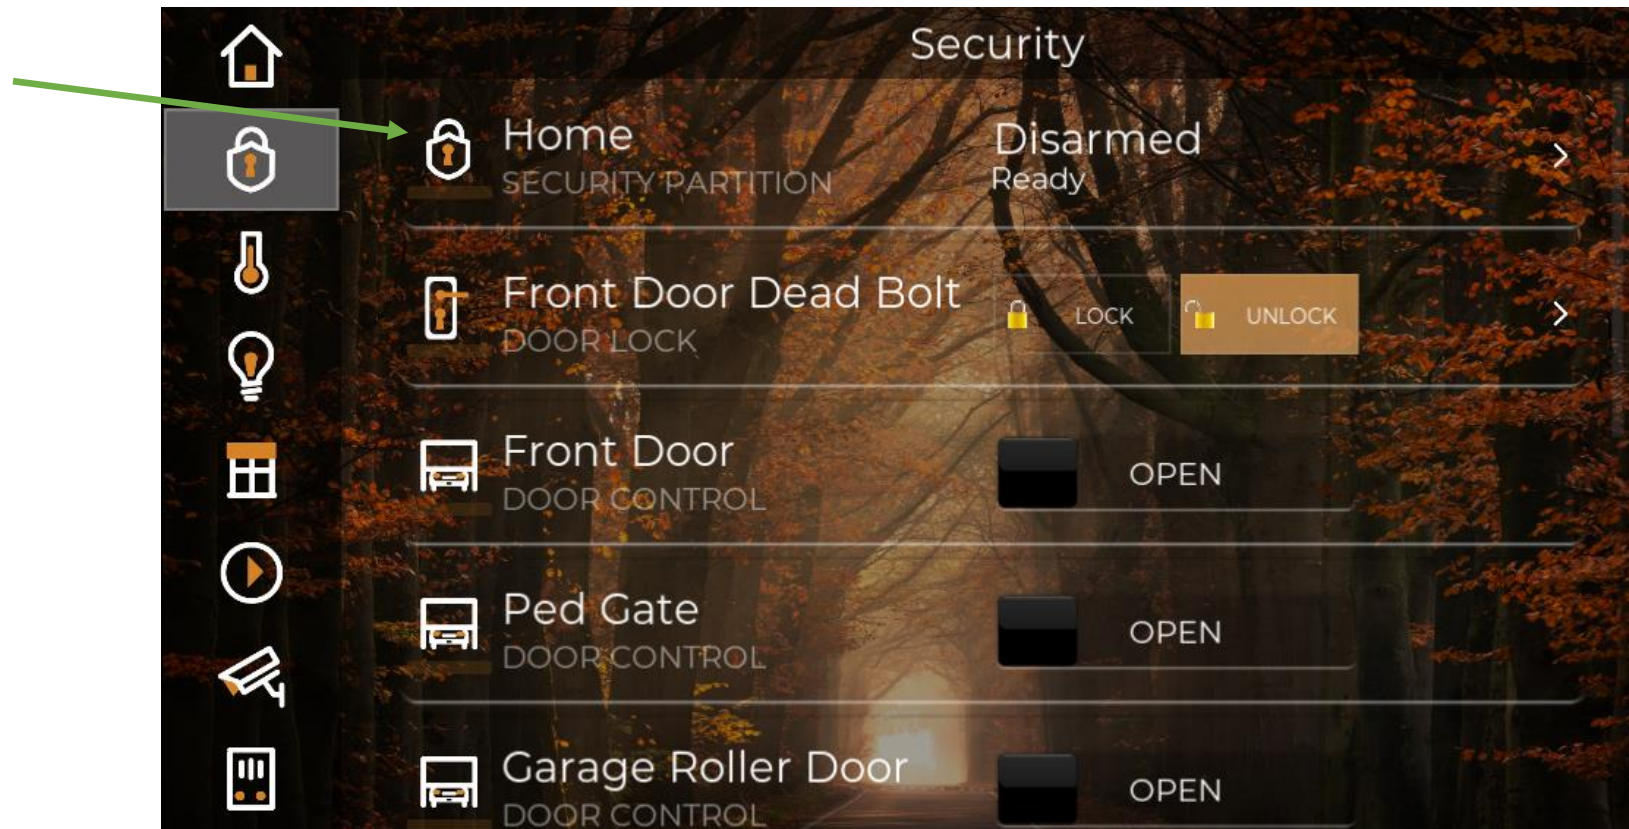

To Arm the alarm, press the 'Arm' button at the bottom of the screen. Then press 'Yes' or type in your code (Depending on how it was set up). To put the system in 'Stay' arming mode (If available), simply press the stay button, then enter your code.

To check on the status of the zones, press the 'list' icon in the top right corner.

To Disarm the system, press the 'Disarm' button and enter your code.

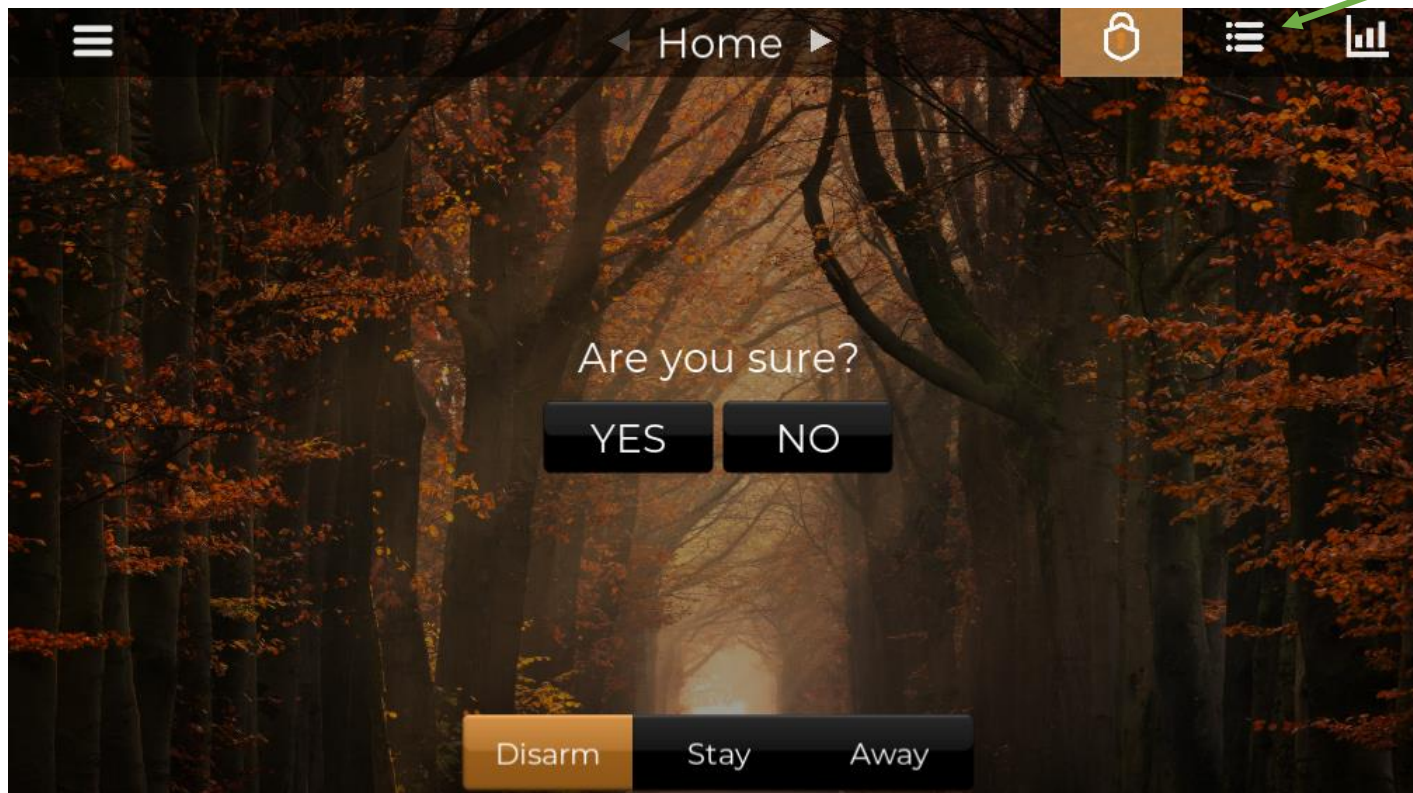


Door locks, Garage Doors and gates can also be controlled from this security section.

If applicable, the front door dead bolt can be unlocked or locked by simply tapping on the desired state. The deadbolt is not automatic.

To control the lock or trigger for a gate, tap and hold to grab the black box and slide across to the end of the slider bar. You will then hear the lock click and the gate/door can be opened. This slide has been designed in such a way so you can't accidentally open a door, gate or roller door.


IMPORTANT: Please be aware, you may have control of the Garage Roller Door or the Drive Gate even when you can't see it. So, be careful there is nothing obstructing the door/gate when closing. If you want to control the roller door and drive gate, it is best to go to the 'Video' page where you can see the camera and control the door (if available).

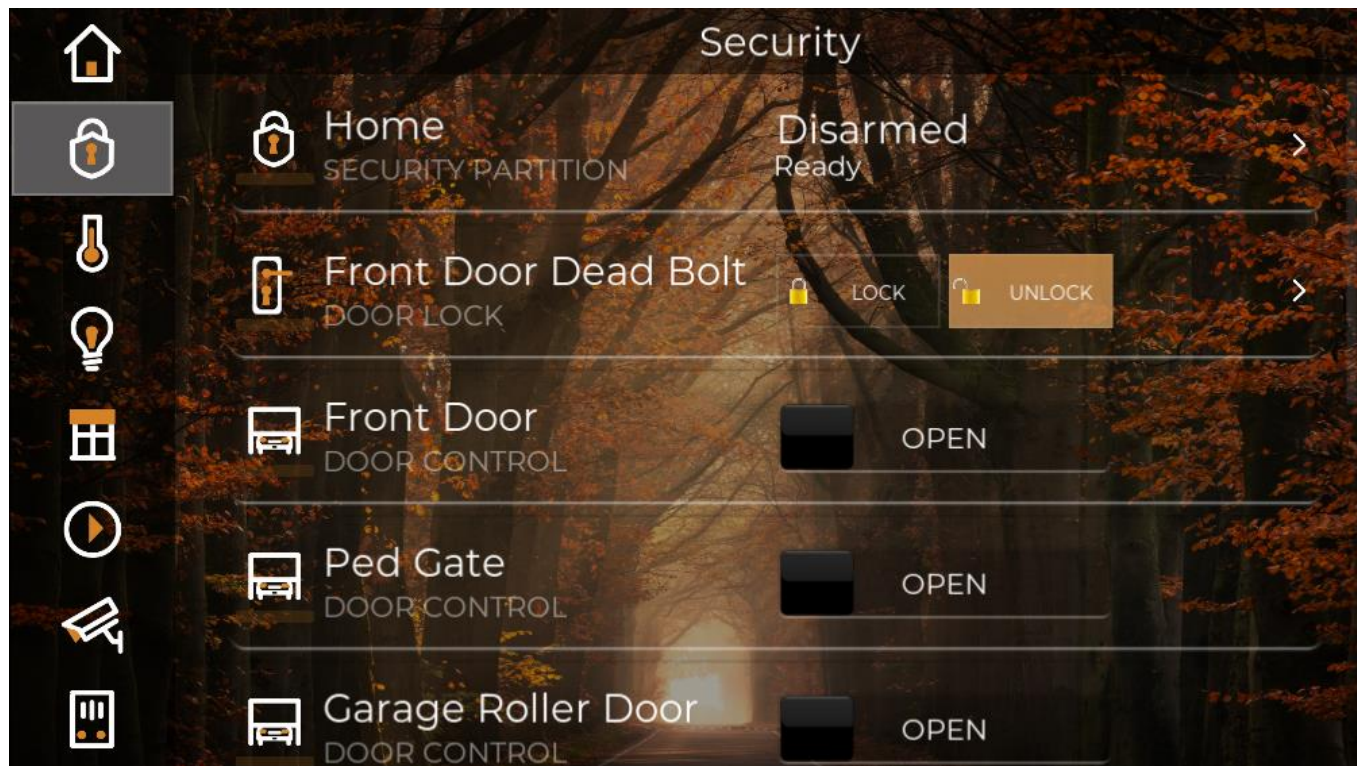

Blinds & Curtains

To control the blinds or curtains in each room, go to the 'Blinds & Curtains' section, then select which room you would like to control.

To Open the blind or curtain, press the UP arrow. To close, press the DOWN arrow. To STOP the blind or curtain while it is moving press the MIDDLE button.

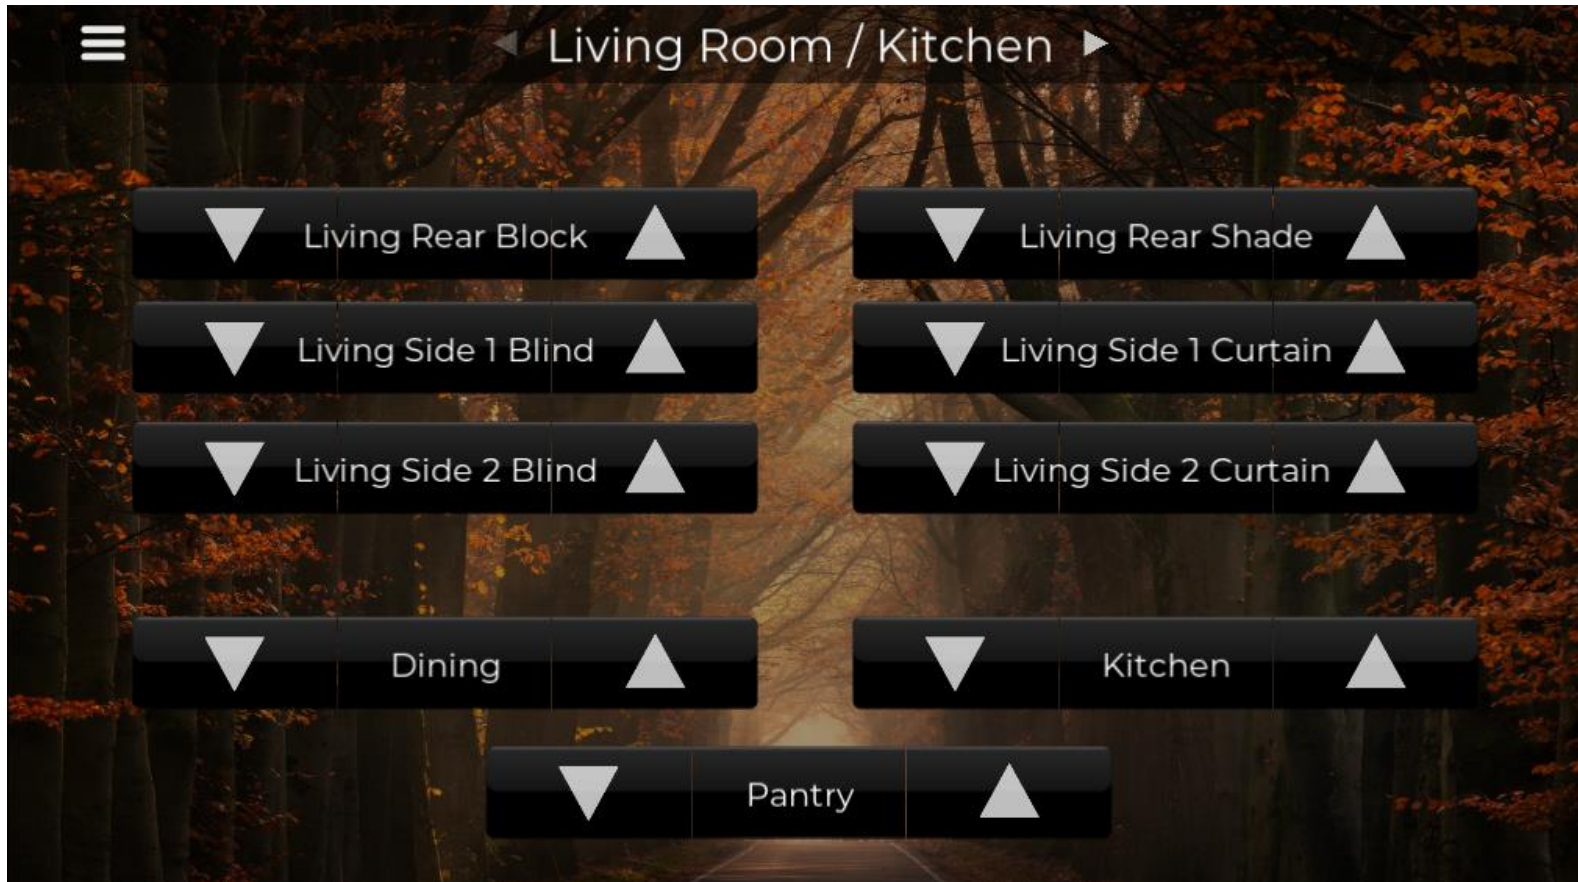


Climate Control

You can control the climate of your whole house via the Elan system. To access the climate control, tap on the 'Climate' section in the home screen. Next, tap on the area you want to control, then the room.


To control the zone, tap on the room, then set the mode and the set point temperature.

NOTE: You may see an * before some of the room names. These denote this room is a 'Master Controller'. The master controller is responsible for selecting whether to be in Heat or Cool mode for its area. For example, you will not be able to run heat in the Gym if you are cooling in the Theatre Room. If you want heat in the gym, firstly make sure the Theatre room is in heating mode.

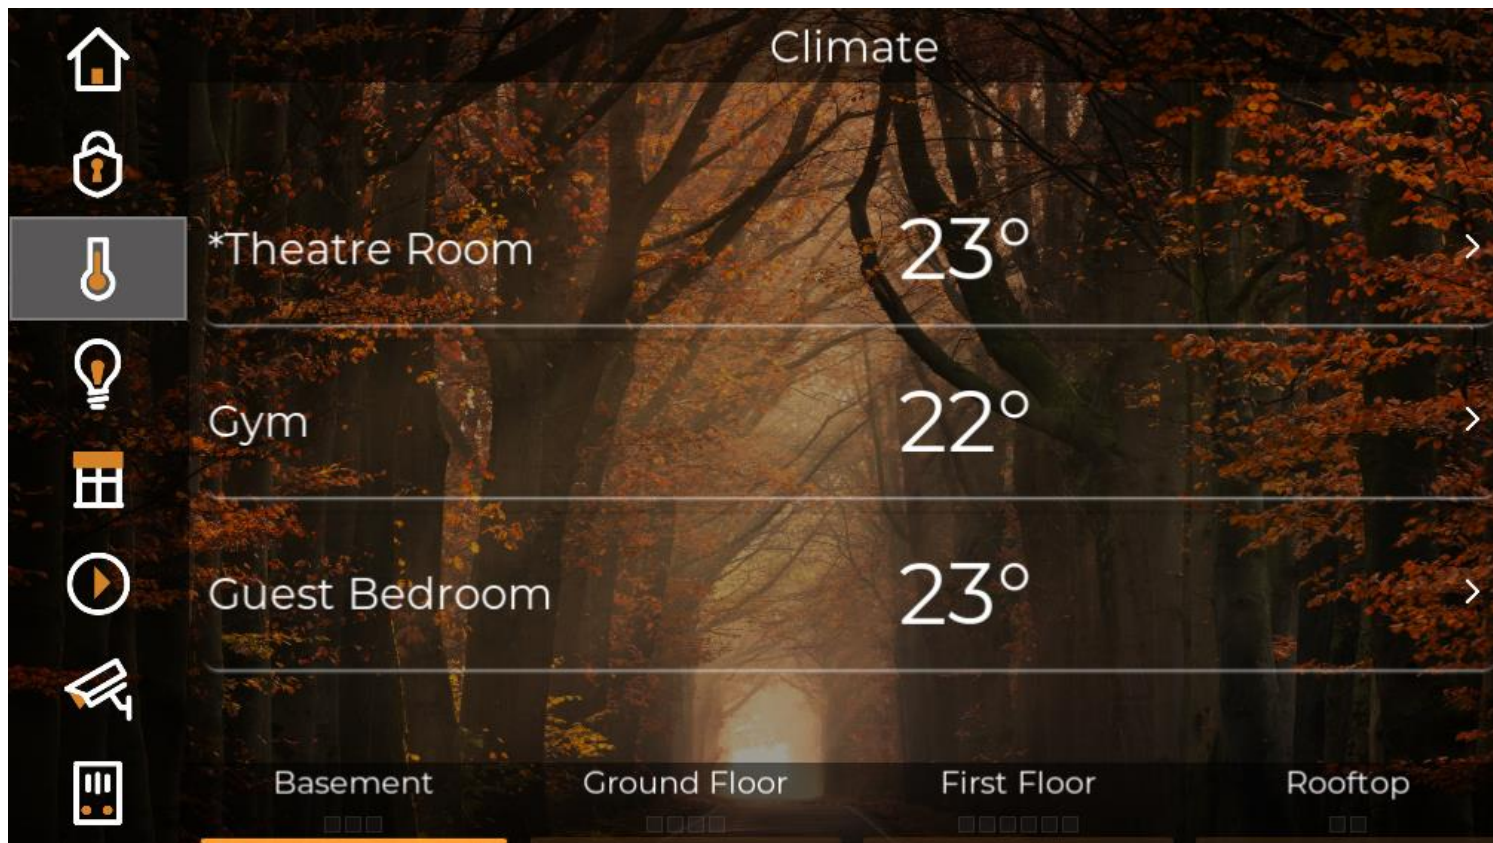


Cameras

To view the live view of the cameras, select the 'Video' section from the main page. You can scroll up and down to see the other cameras.

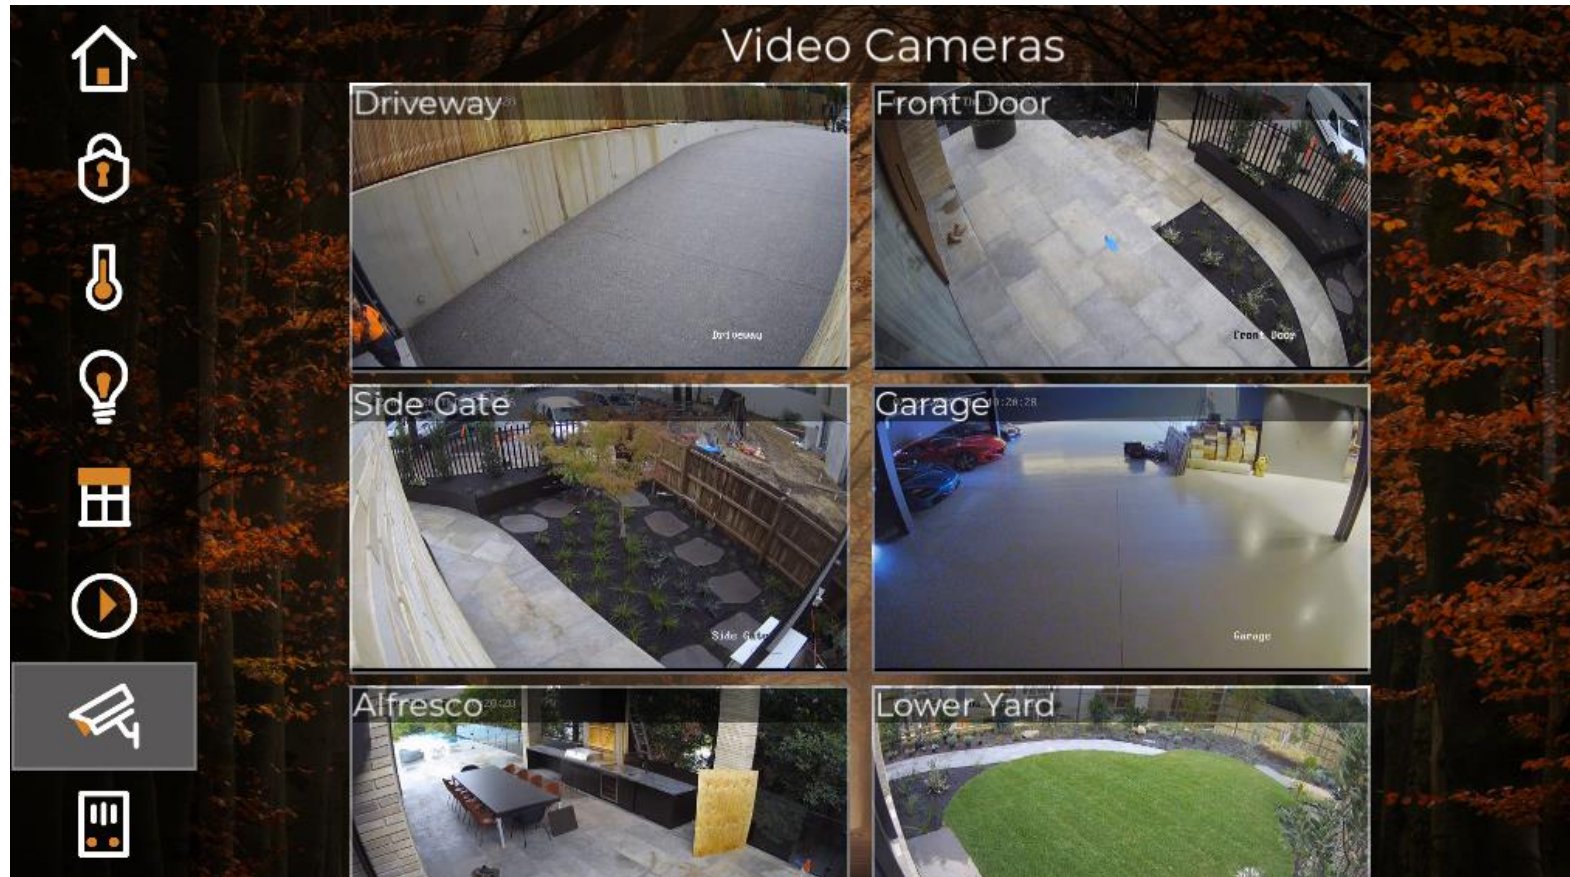

Tap on the image to view only that camera and see any control it may have, such as controlling the Front Drive Gate or Garage Roller Door. If there is an option for control you will see the button to the right of the image on the touch screens or underneath for the phone interface. Simply press the button to operate the function.

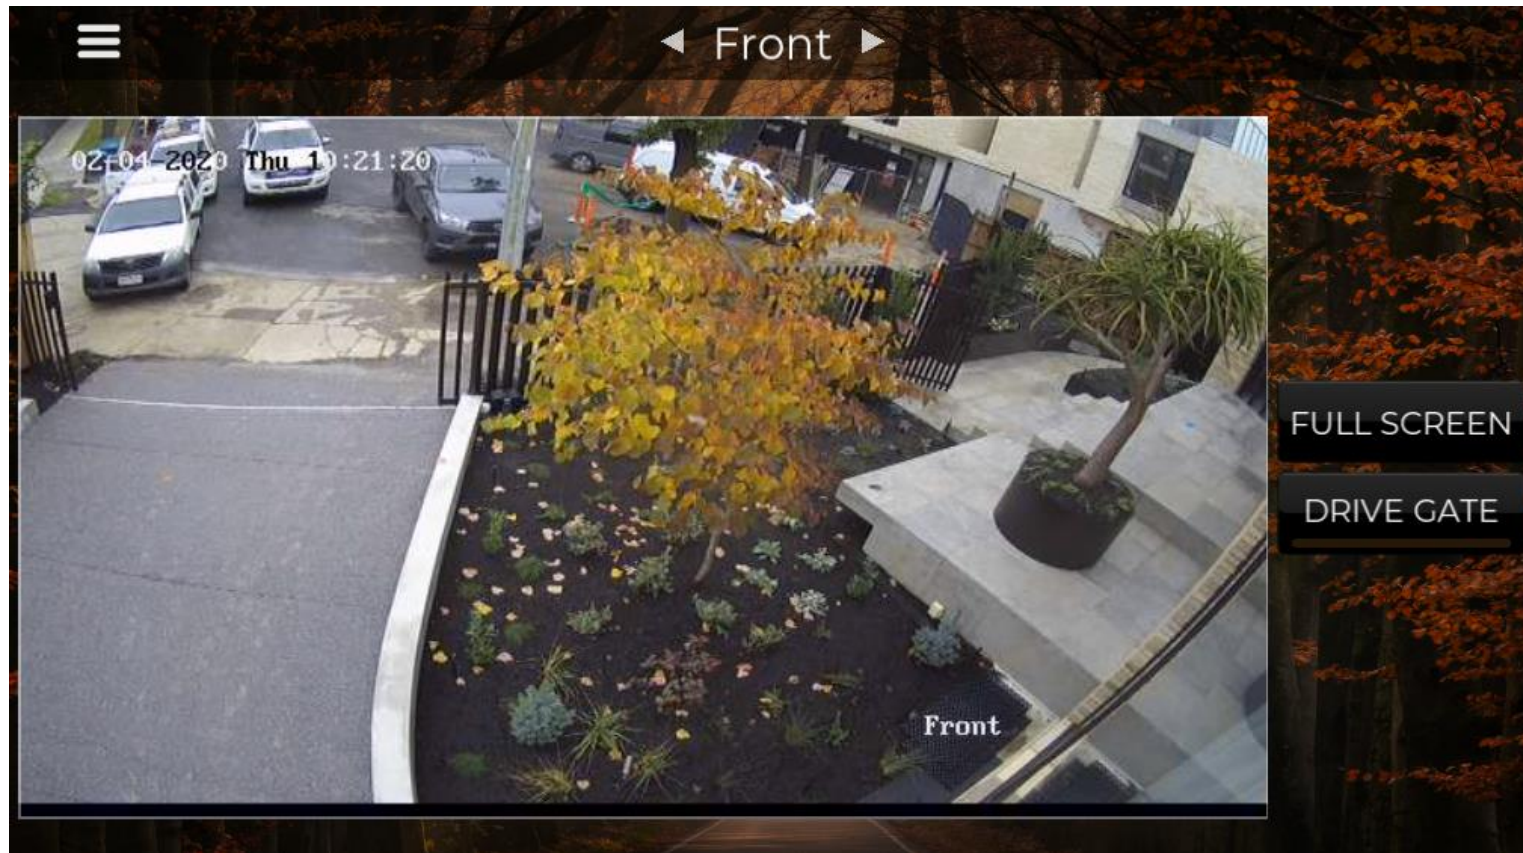


Intercom/Doorbell

When someone presses the doorbell, all the screens and your phones will ring, showing you a video preview of the person who rang the doorbell. To answer, simply press 'Answer'. You will then be able to talk to the person and press the button to let them in the gate and front door if you wish.




If you would like to view the intercom camera, you can do so from the 'Video' section, OR by the 'Intercom' section and pressing on 'Door' then 'Monitor'.

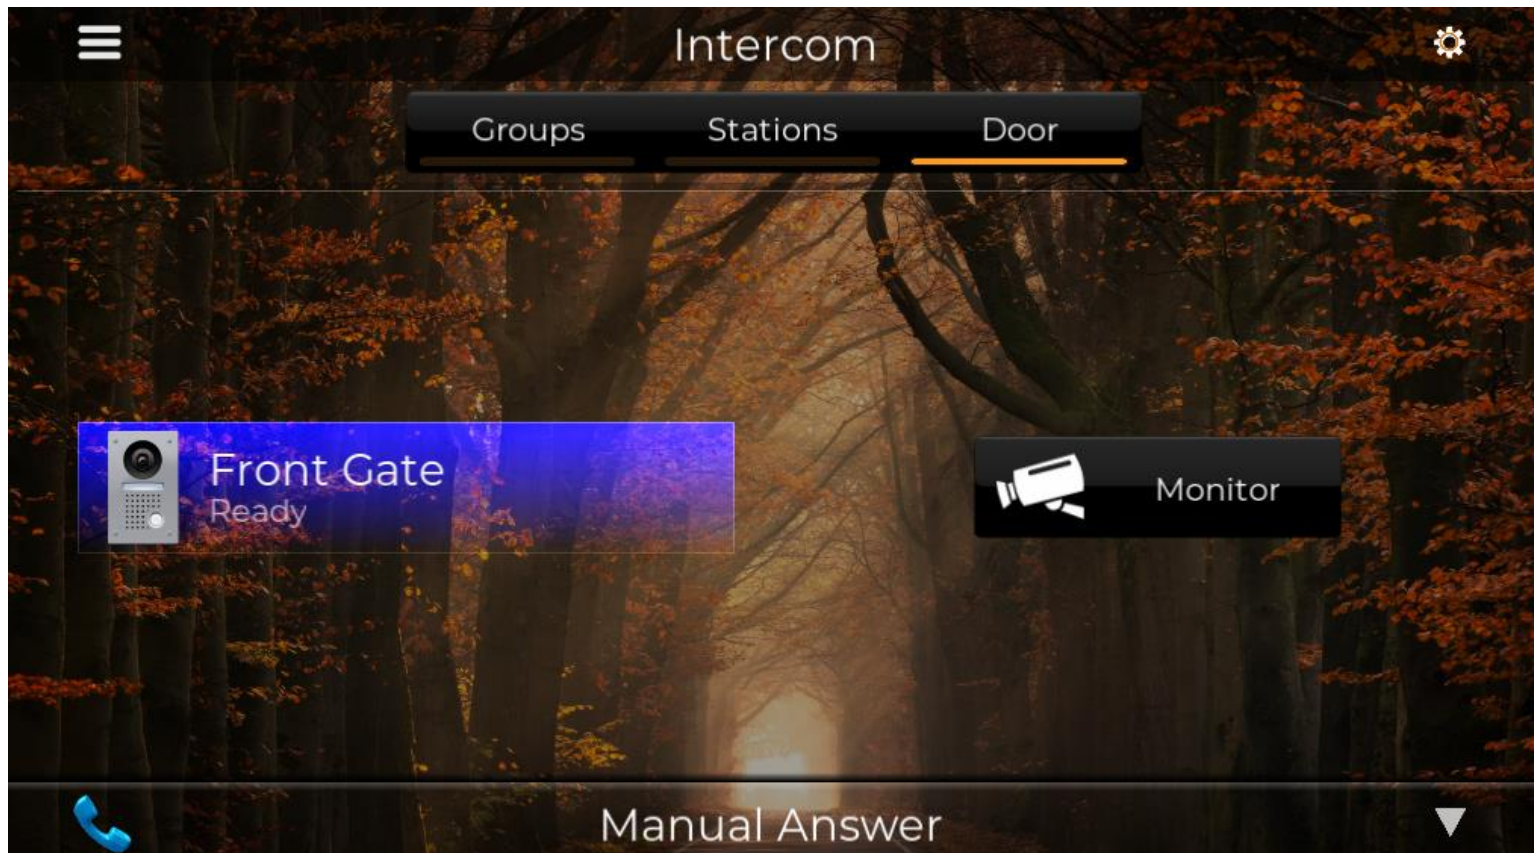

Room to Room Intercom


The Elan touch screens can be used as a room to room intercom system or announcement system. To do this go to the 'Intercom' section on the main page, then press either 'Groups' or 'Stations' depending on if you want to page to all or call an individual screen. Then select a 2-way video or audio call, or a 1-way page (announcement).

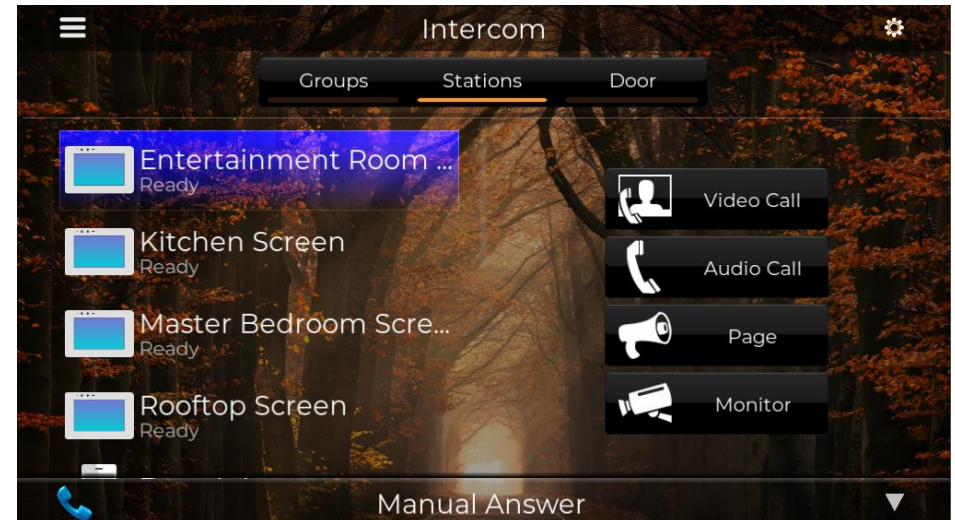


Settings Page

You can change the settings for each Elan device separately. Simply tap on the 'Settings' icon on the main page. Then use password 1234.

Most of these settings you will not need to change. However, you may like to change the overall theme of the interface. To do this tap on 'Configure this Station', then 'Themes'.

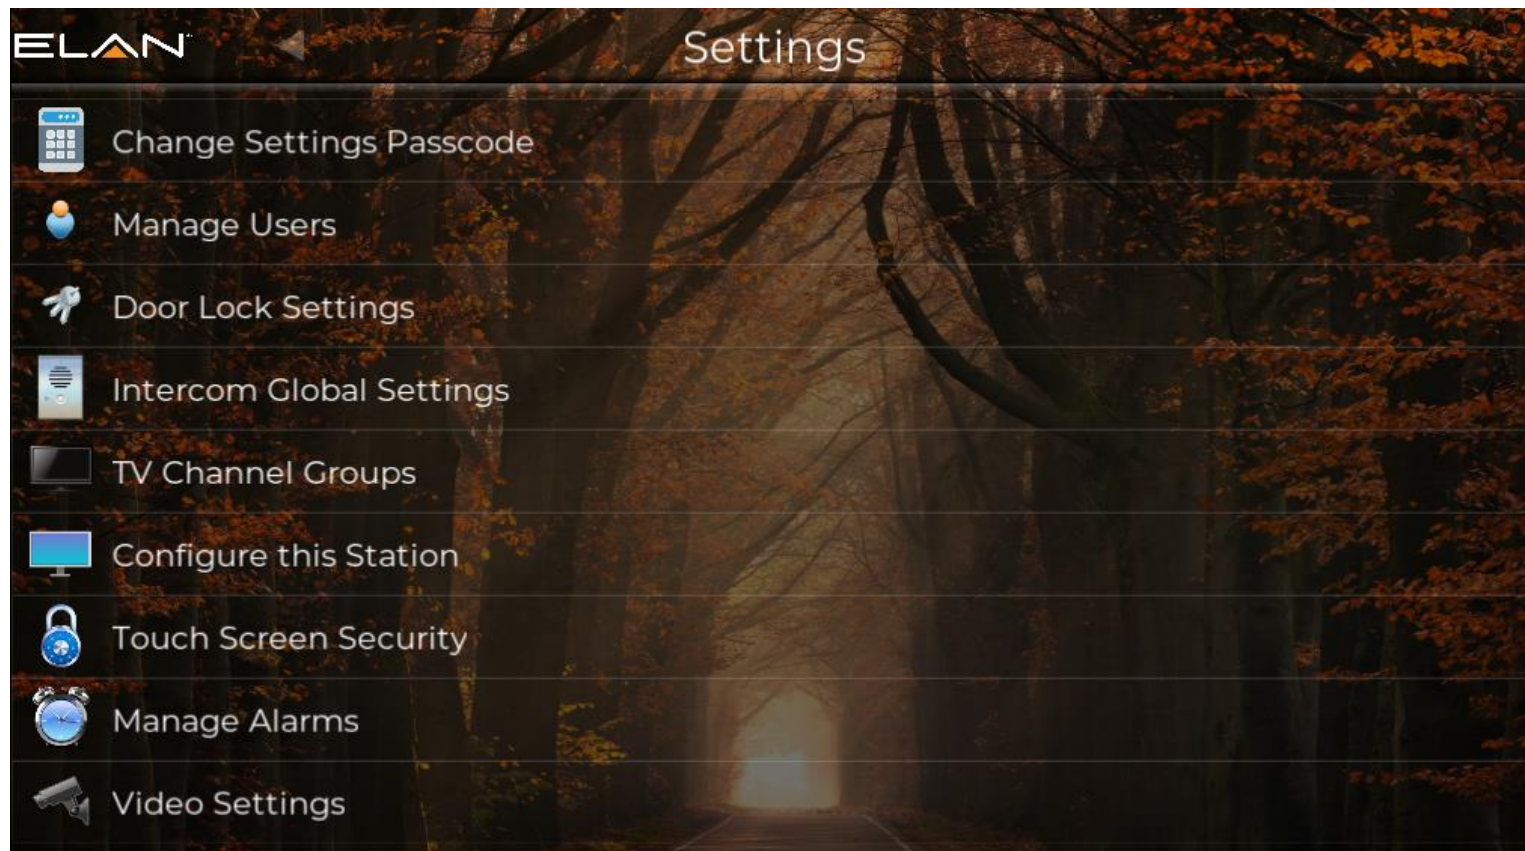




Here you can change the theme for the interface. Tap on each theme to sample it, then choose whether you want to apply it to just this device, or all devices.

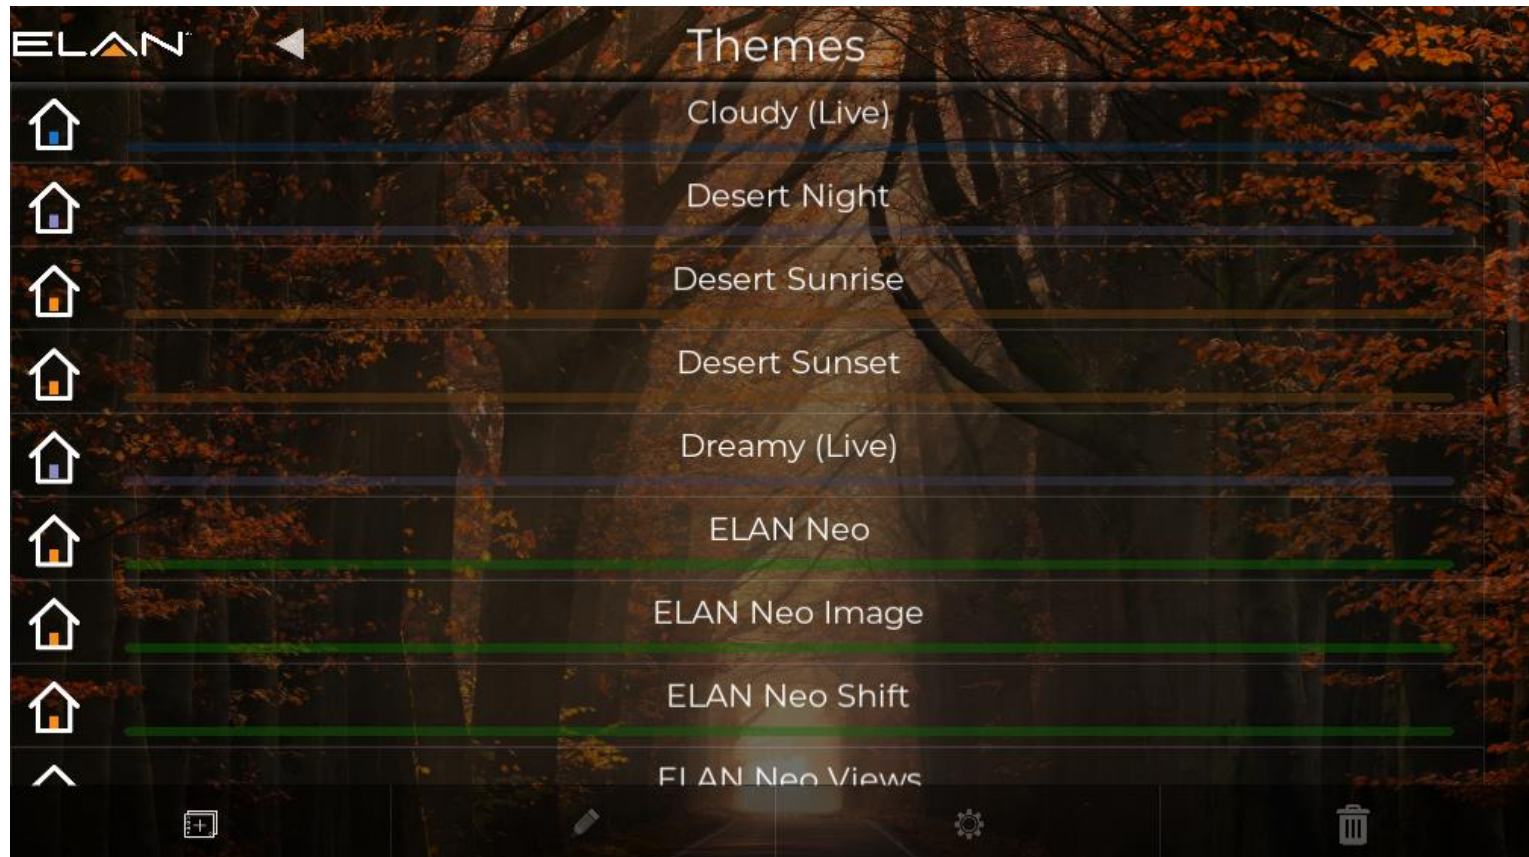

Settings Page: Intercom Settings

Whenever you add Elan to a new device you will also need to add this device to the dial plan if you would like it to ring when someone rings the intercom. Here's how you do that.

1. Press 'Intercom Global Settings'
2. Then press 'Dial Plans'
3. Then Select the Dial Plan and press 'Settings'.
4. Press 'Targets'. You can also change the length of ring time from here under 'Timeout'.
5. Press the '+' button for each device you want to add to the intercom ring plan.
6. Press the 'ELAN' logo at the top to return to the home screen.

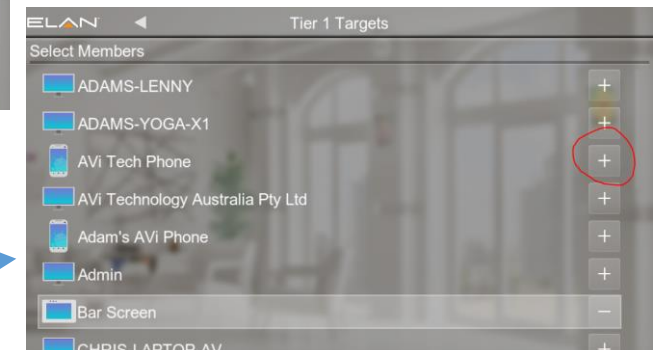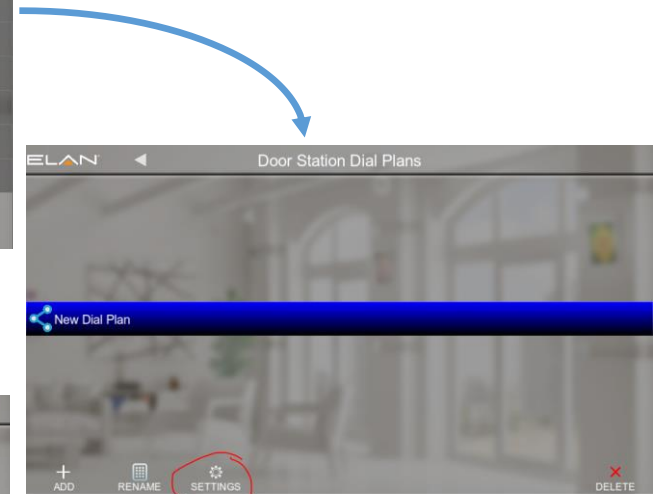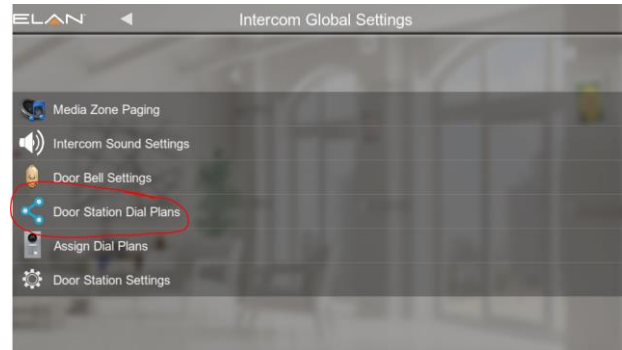

Elan Remote Control System

